

INSTALLATION INSTRUCTIONS

WALL MOUNTING

Rotofast Snap-On: 1" & 2" Fabric Panels

APPLICATION:

For mounting 1"-2" fabric covered fiberglass acoustical panels to walls.

DESCRIPTION:

This installation technique uses a Rotofast Snap-On with ratchet. The ratchet is designed to fit tightly inside the Rotofast anchor for a snug, secure fit. The panel will fit tightly to the mounting surface. Installation is as follows:


Locate the mounting location on the back of the panel. Rotofast anchors should be mounted 6" from the edge, see page 2 for anchor locations.

Drywall Installation


1. Screw Rotofast Snap-On Anchors into the back of the panel using the Rotofast Driver Tool, **by hand only. Do not overtighten.**
2. Insert Marking Plugs into the Snap-On Anchors.
3. Push the panels against the walls to mark anchor locations.
4. Screw drywall anchors into the drywall (provided by others).
5. Screw the black Ratchets to walls at marked locations (#8 pan head screw recommended). Flat end of ratchet goes against wall, curved end faces out.
6. Firmly push panels onto Ratchets to complete installation.

Hard Substrate Installation

1. Measure and mark the location where panel will be placed and mark the orientation on the back of the panel.
2. Mark the locations on the wall where the black ratchets will be installed in step 3.
3. Screw black ratchets to walls at marked locations using correct fastener for your substrate. Flat end of ratchet goes against the wall, curved end faces out.
4. Push the panel onto the black ratchets to make indentations in the panel core material.
5. Screw the anchor into the back of the panel at the location where the black ratchets made indentations. **Do not over-tighten.**
6. Firmly push panels onto Ratchets to complete installation.

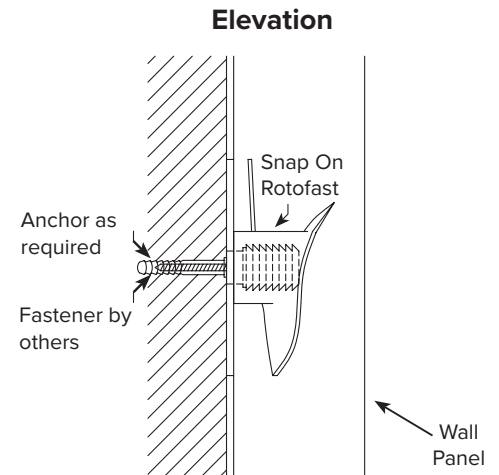


Snap On Rotofast

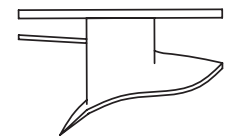

Ratchet



Marking Plug



Rotofast Driver Tool

